

# Spark Plug

## Spark Plug Recommendation

standard spark plug	DPR8EA-9 (NGK) or X24EPR-U9 (DENSO)
for cold climate (below 5°C, 41°F)	DPR7EA-9 (NGK) or X22EPR-U9 (DENSO)
for extended high speed riding	DPR9EA-9 (NGK) or X27EPR-U9 (DENSO)

Use only the recommended type of spark plug in the recommended heat range.


### NOTICE

*Using spark plugs with an improper heat range can cause engine damage.*

## Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on [page 77](#).

1. Clean any dirt from around the spark plug base.
2. Disconnect the spark plug cap (1). Take care to avoid damaging the spark plug wire when disconnecting the cap.
3. Using a spark plug wrench provided in the tool kit, remove the spark plug.

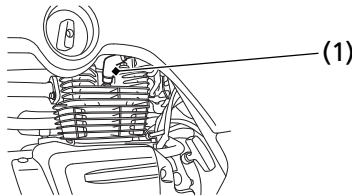

(1) spark plug cap

(cont'd)