

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200		
			km	150	1000	2000		
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
*	FUEL LINE					I	—	
*	THROTTLE OPERATION					I	107	
*	CARBURETOR CHOKE					I	109	
	AIR CLEANER	NOTE 1			C	C	102	
*	SUB AIR CLEANER	NOTE 1			C	R	—	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	106	
	SPARK PLUG				I	I	113	
*	VALVE CLEARANCE				I	I	116	
	ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		94	
**	ENGINE OIL CENTRIFUGAL FILTER					C	—	
*	ENGINE IDLE SPEED				I	I	112	
*	SECONDARY AIR SUPPLY SYSTEM					I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.