Spark Plug

Spark Plug Recommendation

standard spark plug	DPR8EA-9 (NGK) or
	X24EPR-U9 (DENSO)
for cold climate	DPR7EA-9 (NGK) or
(below 5°C, 41°F)	X22EPR-U9 (DENSO)
for extended high	DPR9EA-9 (NGK) or
speed riding	X27EPR-U9 (DENSO)

Use only the recommended type of spark plug in the recommended heat range.

 
NOTICE

Using spark plugs with an improper heat range can cause engine damage.

Spark Plug Inspection & Replacement

Refer to Safety Precautions on page 79.

- 1. Clean any dirt from around the spark plug base.
- 2. Disconnect the spark plug cap (1). Take care to avoid damaging the spark plug wire when disconnecting the cap.
- 3. Using a spark plug wrench provided in the tool kit, remove the spark plug.



(1) spark plug cap

(cont'd)