

# Riding in Reverse

---


5. While turning the reverse assist lever, depress the shift lever to reach the reverse gear (below neutral). Make sure that the reverse indicator (4) comes on.
6. Remove your right hand from the reverse assist lever.

## NOTICE


*If the shift lever is moved while the vehicle is moving, the transmission may be damaged.*

7. Release the rear brake pedal.
8. Slowly release the clutch lever/parking brake lever and open the throttle gradually to begin reverse operation.

RIGHT SIDE

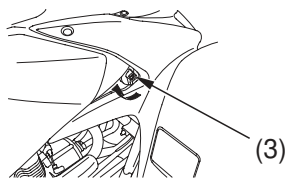

CENTER OF HANDLEBAR

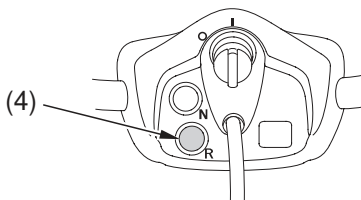

(3) reverse assist lever      (4) reverse indicator

9. Ride slowly. Do not open the throttle suddenly or make abrupt turns.
10. To stop, pull in the clutch lever/parking brake lever, close the throttle and gradually apply both the front and rear brakes. Do not abruptly apply the rear brake by itself.
11. To shift out of reverse into neutral, pull in the clutch lever/parking brake lever and raise the shift lever one click to neutral. Make sure that the reverse indicator goes off and the neutral indicator comes on.