


# Seat Removal

---

Refer to *Safety Precautions* on page 75 .

The seat must be removed for the air cleaner, battery and fuse maintenance, and to access the tool kit and owner's manual.

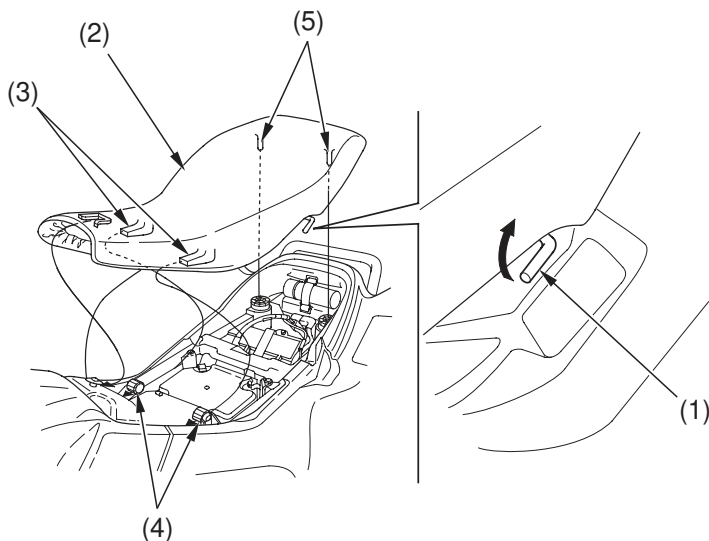

(1) seat lock lever

(2) seat

(3) front prongs

(4) hooks

(5) studs

## Removal

1. Pull the seat lock lever ( 1 ) at the left side of the seat.
2. Slide the seat ( 2 ) back and lift it.

## Installation

1. Insert the front prongs ( 3 ) into the hooks ( 4 ) on the frame and press the studs ( 5 ) into the grommets on the frame.
2. Press down on the seat until locks.