


## Brake Light Switch Adjustment

Refer to *Safety Precautions* on page 75 .

### Rear Brake Only:

Check the operation of the rear brake light switch ( 1 ) at the right side behind the engine from time to time. Adjustment is done by turning the adjusting nut ( 2 ). Turn the nut in direction (A) if the switch operates too late and in direction (B) if the switch operates too soon.

RIGHT SIDE

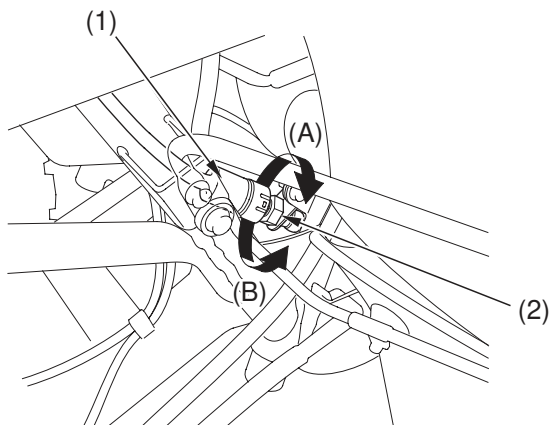

- (1) brake light switch
- (2) adjusting nut