

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page	
			mi	100	600	1200				
			km	150	1000	2000				
			MONTH	1	6	12				
	NOTE	HOURS	20	100	200					
*	FUEL LINE					I		—		
*	THROTTLE OPERATION					I		103		
*	CARBURETOR CHOKE					I		105		
	AIR CLEANER	NOTE 1			C	C		98		
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I		102		
	SPARK PLUG				I	I		112		
*	VALVE CLEARANCE				I	I	I	115		
	ENGINE OIL				INITIAL = 100 mi (150 km), 20 operating hours or 1 month: R REGULAR = Every 600 mi (1000 km), 100 operating hours or 12 months: R			90		
**	ENGINE OIL STRAINER SCREEN					C		—		
**	ENGINE OIL CENTRIFUGAL FILTER					C		—		
*	ENGINE IDLE SPEED				I	I	I	111		

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual ([page 190](#)).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.