

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
		NOTE	HOURS	20	100	200		
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)	I	96	
*	BRAKE FLUID	NOTE 3			I	I	118	
*	BRAKE SHOE WEAR	NOTE 1				I	124	
*	BRAKE PAD WEAR	NOTE 1, 2				I	121	
*	BRAKE LIGHT SWITCH			I	I	I	127	
	BRAKE SYSTEM			I	I	I	118	
*	REVERSE LOCK SYSTEM			I	I	I	110	
	GUARDS				I	I	135	
*	CLUTCH SYSTEM			I	I	I	106	
*	SUSPENSION				I	I	—	
*	SPARK ARRESTER				C	C	116	
*	NUTS, BOLTS, FASTENERS			I		I	—	
**	WHEELS/TIRES			I	I	I	—	
**	TIE-ROD AND JOINT BOOTS			I	I	I	—	
**	STEERING SHAFT HOLDER BEARING					I	—	
**	STEERING SYSTEM					I	—	

- * Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 190).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.