

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200		
			km	150	1000	2000		
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
*	FUEL LINE					I	—	
*	THROTTLE OPERATION					I	104	
*	CARBURETOR CHOKE					I	106	
	AIR CLEANER	NOTE 1			C	C	99	
*	SUB AIR CLEANER	NOTE 1			C	R	—	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	103	
	SPARK PLUG				I	I	113	
*	VALVE CLEARANCE				I	I	116	
	ENGINE OIL				INITIAL = 100 mi (150 km), 20 operating hours or 1 month: R REGULAR = Every 600 mi (1000 km), 100 operating hours or 12 months: R		91	
**	ENGINE OIL CENTRIFUGAL FILTER					C	—	
*	ENGINE IDLE SPEED				I	I	112	
*	SECONDARY AIR SUPPLY SYSTEM					I	—	

* Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Service Manual (page 192).

** In the interest of safety, we recommend these items be serviced only by your dealer.