

Operation Component Locations


rear brake lever/
parking brake lever

headlight dimmer switch

P/R lever

headlight switch

front brake lever

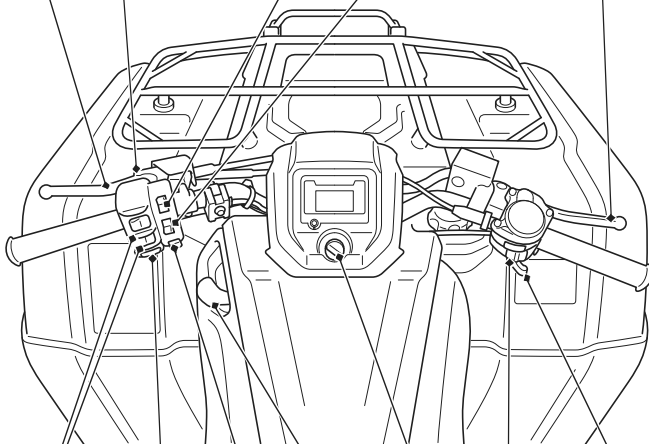

gearshift
switches

start button

engine stop switch

throttle lever

drive mode select
switch

ignition switch

2WD/4WD select lever