

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines ([page 239](#)).

Safe Riding Precautions	67
Off-road Use Only.....	67
Keep Hands and Feet on Controls.....	68
Control Speed	69
Use Care on Unfamiliar or Rough Terrain	70
Do Not Perform Stunts.....	71
Starting & Stopping the Engine.....	72
Preparation	73
Starting Procedure	74
Flooded Engine.....	75
Bank Angle Sensor Ignition Cut-off System	75
Stalled Engine.....	76
How to Stop the Engine.....	77
Using the Recoil Starter (Canada only)	78
Shifting Gears.....	79

(cont'd)