

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS				I	I	183
	FRONT and REAR FINAL GEAR OIL				(R: EVERY 2 YEARS)	I	134, 137
*	2WD/4WD SELECT SYSTEM					I	—
*	BRAKE FLUID	NOTE 3			I	I	163
*	BRAKE SHOES WEAR	NOTE 1, 2				I	171
*	BRAKE PADS WEAR	NOTE 1, 2				I	166
*	BRAKE LIGHT SWITCH			I	I	I	172
	BRAKE SYSTEM			I	I	I	163
*	REVERSE LOCK SYSTEM GUARDS			I	I	I	154
					I	I	181
*	SUSPENSION				I	I	160
*	SPARK ARRESTER				C	C	159
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	174
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 248).

** In the interest of safety, we recommend these items be serviced only by your dealer.