

Emergency Gear Selection & Operation

If the shift switches do not operate, use the following procedure to manually select a gear so you may drive the vehicle to a location where it can be loaded and transported to your dealer.

1. Turn the ignition switch to the ON (I) position.
2. Remove the seat ([page 118](#)), rear fender cover ([page 121](#)) and tank cover assembly ([page 119](#)).
3. Remove the gear change tool ([page 116](#)).
4. Check the neutral indicator.
If the transmission is in neutral, go to step 5.
If the transmission is not in neutral, use the gear change tool to shift to neutral so you will be able to start the engine. Refer to *How to Shift Gears Manually*: ([page 215](#)).
5. Apply the parking brake.
6. Press the start button to start the engine.
7. Set 2nd gear position. Refer to *How to Shift Gears Manually*: ([page 215](#)).
8. Return the gear change tool to the storage location.
9. Install the tank cover assembly, rear fender cover and seat.
10. Get on the ATV. Ride it at a safe speed to a place where it can be repaired or serviced.