
Reverse Switch

LEFT HANDLEBAR

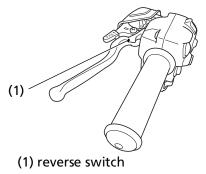

The reverse switch (1) is used when shifting the transmission into reverse (R).

To shift into reverse (R), see *Riding in Reverse*, page 86.