
Tank Cover Assembly Removal

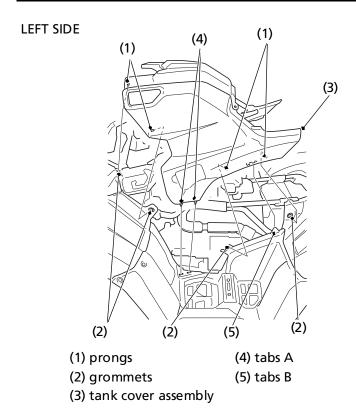

Installation

Install the parts in the reverse order of removal.

Make sure that all prongs and tabs are installed securely in position.