 
Clip Removal

Removal

- 1. Pull up the center pin to release the lock.
- 2. Pull out the clip of the hole.

1. 2.



Installation

- 1. Insert the clip into the hole.
- 2. Press down the center pin securely to lock the clip.

1. 2.

