

If the Transmission Is Not Functioning Properly

If the ATV does not move, even though “-” is not blinking in the gear position indicator:

If your ATV won't move, it is possible the transmission is locked. Use the following procedure to unlock the transmission.

1. Make sure the transmission is in neutral.
2. Apply the parking brake.
3. Turn the ignition switch to the OFF (w) position.
4. Remove the oil check lid (page 131).
5. Using the gear change tool (1), loosen the screw (2) and release the lock plate (3).

