
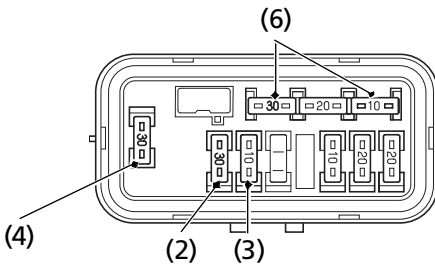


If a Fuse Blows

Main and Shift Motor Fuses Access

1. To prevent an accidental short circuit, turn the ignition switch to OFF (w) before checking or replacing the fuses.
2. Remove the seat (page 120).
3. Remove the rear fender cover (page 123).
4. To access the main fuses (2) (3) and shift motor fuse (4), remove the fuse box cover (5).

UNDER REAR FENDER COVER

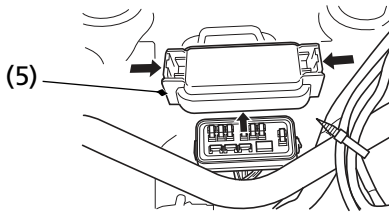

- | | |
|----------------------|--------------------|
| (2) main fuse 1 | (5) fuse box cover |
| (3) main fuse 2 | (6) spare fuses |
| (4) shift motor fuse | |

5. Pull the main fuse out with the fuse puller on the underside of the rear fender cover (page 119).
If it is blown, install the spare fuses (6).

(cont'd)