

Engine Oil & Filter

7. If the oil level is near or below the lower level mark, remove the seat ([page 118](#)) and the tank cover assembly ([page 119](#)). Remove the oil fill cap (5) from the front right crankcase cover and add the specified oil into the fill cap hole, up to the upper level mark on the dipstick.

Do not over fill.

8. Reinstall the oil fill cap and dipstick.

9. Install the tank cover assembly.


10. Install the seat.

11. Install the oil check lid.

NOTICE

Running the engine with an improper oil level can cause serious engine damage.

RIGHT SIDE

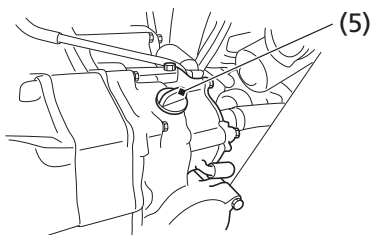

(5) oil fill cap