

# Engine Oil & Filter

## Changing Engine Oil & Filter

Refer to *Safety Precautions* on [page 107](#).

Your ATV's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter specified for your model or a filter of equal quality.

### NOTICE

*Using the wrong oil filter may result in leaks or engine damage.*


This procedure requires mechanical skill and professional tools such as a torque wrench as well as a means for disposing of the drained fluid ([page 202](#)). If you do not have the skills or the tools, see your dealer.

Change the oil with the engine warm to assure complete and rapid draining.

*Drain the Engine Oil:*

1. With the ATV on the level ground, remove the seat ([page 118](#)) and the tank cover assembly ([page 119](#)), and then remove the oil fill cap from the front right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the engine oil drain bolt (1) and sealing washer (2).

### UNDER ENGINE

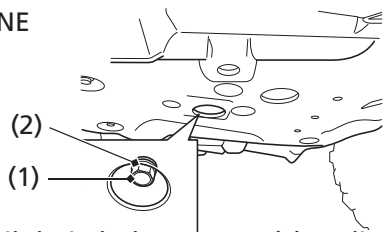

(1) engine oil drain bolt

(2) sealing washer

(cont'd)