


# Air Cleaner

## Cleaning

1. Remove the seat ([page 118](#)).

### UNDER SEAT

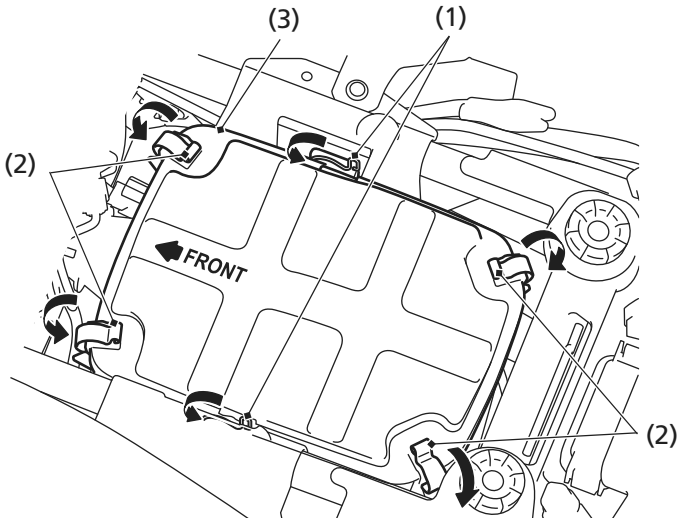

(1) spring hooks

(3) air cleaner housing cover

(2) retainer clips

2. Unlatch the spring hooks (1) and retainer clips (2).
3. Remove the air cleaner housing cover (3).

(cont'd)