

# Operation Component Locations

---


rear brake lever/  
parking brake lever

headlight dimmer switch

P/R lever

headlight switch

front brake lever

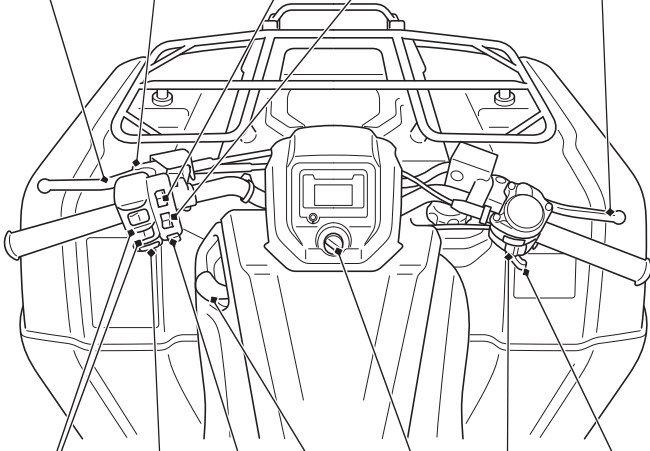

gearshift  
switches

start button

engine stop switch

2WD/4WD select lever

throttle lever

drive mode select  
switch

ignition switch