

# Shifting Gears

---

Your ATV has two drive modes: automatic shift (AUTO) mode and manual shift (ESP) mode.


## Drive mode select (AUTO/ESP)

The drive mode select switch (1) is located on the right handlebar.

To select the drive mode, operate the drive mode select switch.

With the throttle fully closed, the drive mode can be changed while the engine is running.

## RIGHT HANDLEBAR

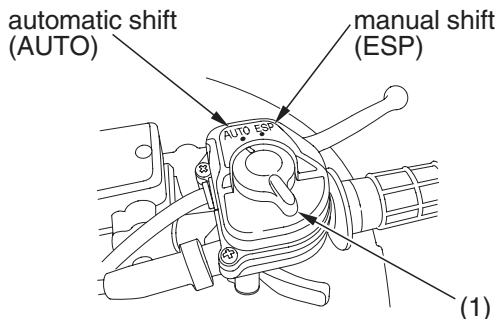

(1) drive mode select switch

In the automatic shift (AUTO) mode, you can select neutral (N), drive (D), or reverse (R).

## Neutral (N)

Use neutral when you start the engine, or if it is necessary to stop briefly with the engine idling.

The gear position indicator shows “N”.