


Indicators & Displays

Odometer

The odometer (1) registers total distance traveled in mileage while the ignition is ON (q) with the ODO display (2). The odometer locks at 999999 when the readout exceeds 999999.

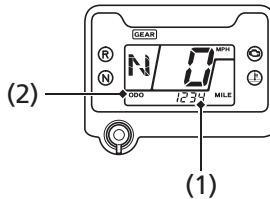


(1) odometer

(2) ODO display

Tripmeter

The tripmeter (1) shows mileage per trip with the TRIP display (2), while the ignition is ON (q) since you last reset the tripmeter. The tripmeter returns to 0.0 when the read-out exceeds 999.9. To reset the tripmeter to zero, press the mode button (3) and hold it in for at least 2 seconds in the tripmeter mode.

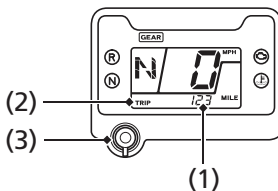

(1) tripmeter

(2) TRIP display

(3) mode button