

Instruments & Controls

This section shows the location of all indicators and controls you would normally use before or while riding your ATV.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations	11
Indicators & Displays	14
Multi-function Display	20
Speed and Mileage Unit Changing	23
4WD Indicator (Except TRX420TE1)	23
Gear Position Indicator	24
Fuel Gauge	25
Digital Clock	27
Odometer	28
Tripmeter	28
Coolant Temperature Gauge	29
Hourmeter	31
Maintenance Tripmeter & Maintenance Hourmeter	32

(cont'd)