


Indicators & Displays

Coolant Temperature Gauge

The coolant temperature gauge (1) with the coolant temperature mark (2) shows the coolant temperature.

When coolant temperature is low, the coolant temperature gauge will display “Lo”.

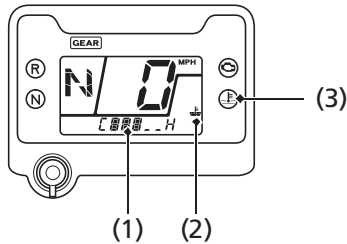

(1) coolant temperature gauge
(2) coolant temperature mark

(3) high coolant
temperature indicator

If all sections of the coolant temperature gauge and high coolant temperature indicator are on (automatically appears in the display) while you are riding, immediately stop the vehicle, turn the engine off and check the coolant reserve tank level. See [page 137](#).

