

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	REGULAR MAINT. INTERVAL			Refer to page	
			INITIAL MAINT.	600	1200		
			mi	100	200		
			km	150	300		
NOTE	MONTH	HOURS	6	12	200		
	DRIVETRAIN BOOTS				I	I	181
	FRONT and REAR FINAL GEAR OIL (Except TRX420TE1)				(R: EVERY 2 YEARS)	I	131, 134
	REAR FINAL GEAR OIL (TRX420TE1 only)				(R: EVERY 2 YEARS)	I	131
*	2WD/4WD SELECT SYSTEM (Except TRX420TE1)					I	—
*	BRAKE FLUID	NOTE 3			I	I	161
*	BRAKE SHOES WEAR	NOTE 1, 2				I	169
*	BRAKE PADS WEAR	NOTE 1, 2				I	164
*	BRAKE LIGHT SWITCH				I	I	170
	BRAKE SYSTEM				I	I	161
*	REVERSE LOCK SYSTEM				I	I	152
	GUARDS				I	I	179
*	CLUTCH SYSTEM				I	I	151
*	SUSPENSION				I	I	158
*	SPARK ARRESTER				C	C	157
*	NUTS, BOLTS, FASTENERS				I	I	—
**	WHEELS/TIRES				I	I	172
**	TIE-ROD AND JOINT BOOTS				I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 244).

** In the interest of safety, we recommend these items be serviced only by your dealer.