

Indicators & Displays

Lamp Check

Initial lamp check:

The indicators come on for a few seconds and then go off when you turn the ignition switch to ON (I).

Except TRX420TM1:

The high coolant temperature indicator and PGM-FI indicator will temporarily come back on for a few seconds and then go off after initial lamp check.

TRX420FM2 only:

The PS (Electric Power Steering) indicator come back on and remains on until the engine is started after initial lamp check.

These indicators are identified in the table on [page 17](#) with the words: *Lamp Check*.

When applicable, the reverse or neutral indicators come back on and remain on until you shift out of reverse or neutral after initial lamp check.

Except TRX420TM1:

If one of these indicators does not come on when it should, have your dealer check for problems.

TRX420TM1 only:

If one of these indicators does not come on when it should, have your dealer check for burned-out bulbs or other problems.