

# Starting & Stopping the Engine

---

Confirm the following:

- TRX420TM1: The transmission is in neutral, and the neutral indicator (2) is ON.  
TRX420FM1/FM2: The transmission is in neutral, the neutral indicator (2) is ON and the gear position indicator shows "N"
- The engine stop switch (3) is set to RUN (⊙).

## Starting Procedure

This ATV is fuel-injected with an automatic choke.  
Follow the procedure indicated below.

### Any Air Temperature

- Press the start button with the throttle completely closed,

The engine will not start if the throttle is fully open (because the electronic control module cuts off the fuel supply).

Snapping the throttle or fast idling for more than 5 minutes may cause exhaust pipe and muffler discolorations.