

# Operation Component Locations


---

rear brake lever/  
parking brake lever

front brake lever

P/R lever

headlight switch

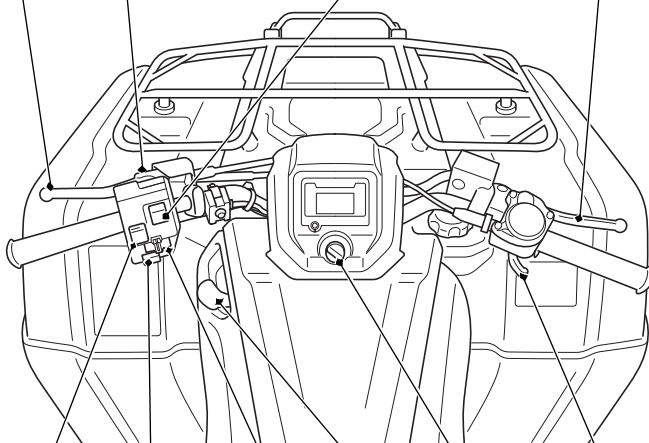

engine stop  
switch

throttle lever

start button

ignition switch

headlight dimmer  
switch

2WD/4WD select lever  
(Except TRX420TM1)