

Operation Component Locations

rear brake lever/
parking brake lever

front brake lever

P/R lever

headlight switch

engine stop
switch

throttle lever

start button

ignition switch

headlight dimmer
switch

2WD/4WD select lever
(Except TRX420TM1)

