

Indicators & Displays

When the fuel gauge show E _ _ _ _ F (4) and LO FUEL (5) blink 3 times alternately and fuel mark blinks, you should refill the tank as soon as possible.

The amount of fuel reserve is approximately:

1.29 US gal (4.9 ℓ)



(4) E _ _ _ _ F


(5) LO FUEL

Fuel gauge failure:

If the fuel gauge function fails, E - - - - F (6) will blink.

See your dealer.

(The fuel mark disappears except the fuel gauge display)

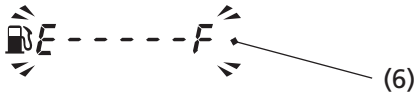

(6) E - - - - F