

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page		
				mi	100		600	1200
				km	150		1000	2000
				MONTH	1		6	12
NOTE	HOURS	20	100	200				
*	FUEL LINE				I	—		
*	THROTTLE OPERATION				I	147		
	AIR CLEANER	NOTE 1			C C	141		
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I I	146		
	SPARK PLUG				I I	151		
*	VALVE CLEARANCE			I	I I	154		
	ENGINE OIL			INITIAL= 100 mi (150km), 20 operating hours or 1 month: R		120		
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		125		
*	ENGINE IDLE SPEED			I	I I	—		
	RADIATOR COOLANT	NOTE 3			I I	134		
*	COOLING SYSTEM	NOTE 2			I I	—		

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 238).