


# Air Cleaner

---

## Cleaning

1. Remove the seat (page 112).

UNDER SEAT

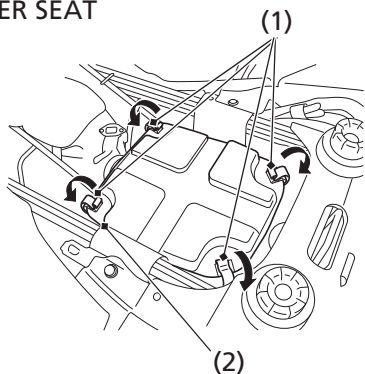

(1) retainer clips      (2) air cleaner housing cover

2. Unlatch the retainer clips (1).
3. Remove the air cleaner housing cover (2).