

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
			km	150	1000		2000
MONTH	1	6	12				
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS			I	I	181	
	FRONT/REAR FINAL GEAR OIL (Except TM1 model)			(R: EVERY 2 YEARS)	I	131, 134	
	REAR FINAL GEAR CASE OIL (For TM1 model)			(R: EVERY 2 YEARS)	I	131	
*	2WD/4WD SELECT SYSTEM (Except TM1 model)				I	—	
*	BRAKE FLUID	(NOTE 3)		I	I	161	
*	BRAKE SHOES WEAR	(NOTE 1, 2)			I	169	
*	BRAKE PADS WEAR	(NOTE 1, 2)			I	164	
*	BRAKE LIGHT SWITCH		I	I	I	170	
	BRAKE SYSTEM		I	I	I	161	
*	REVERSE INHIBITOR SYSTEM		I	I	I	152	
	GUARDS			I	I	179	
*	CLUTCH SYSTEM		I	I	I	151	
*	SUSPENSION			I	I	158	
*	SPARK ARRESTER			C	C	157	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	172	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).

** In the interest of safety, we recommend these items be serviced only by your dealer.