

Controls & Features

Ignition Switch


The ignition switch (1) is used for starting and stopping the engine (page 60). Insert the key and turn it to the right for the ON (I) position.

TRX420FPM only:

The ignition switch is also used to reset the oil change indicator (page 20).

Key Position	Function
ON (I)	Electrical circuits on.
OFF (O)	No electrical circuits function.

CENTER OF HANDLEBAR

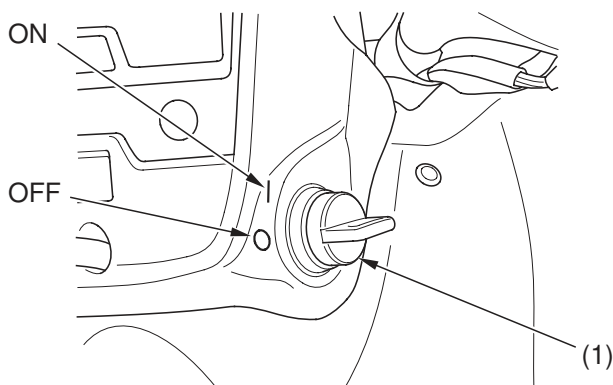

(1) ignition switch

I ON
O OFF