

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER	INITIAL	REGULAR		Refer to page
		COMES	MAINT.	MAINT. INTERVAL		
		FIRST		600	1200	
		⇨	mi	100	600	
		km	150	1000	2000	
		MONTH	1	6	12	
		NOTE	HOURS	20	100	200
*	FUEL LINE				I	—
*	THROTTLE OPERATION				I	130
	AIR CLEANER	NOTE 1			C C	124
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I I	129
	SPARK PLUG				I I I	134
*	VALVE CLEARANCE				I I I	137
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R		105
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		110
	RADIATOR COOLANT	NOTE 3			I I	118
*	COOLING SYSTEM	NOTE 2			I I	—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 222).