

# Engine Oil & Filter

---

6. Reinstall the oil filter cover, making sure the bolts are tightened to the specified torque:  
7 lbf·ft (10 N·m , 1.0 kgf·m)
7. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 182 ).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

8. Install the right side cover.

### *Add Engine Oil:*

1. Reinstall the oil drain plug with a new sealing washer, and tighten it to the specified torque:  
18 lbf·ft (25 N·m , 2.5 kgf·m)
2. Fill the crankcase with the recommended grade oil approximately:  
3.0 US qt (2.8 ℓ)
3. Reinstall the oil fill cap/dipstick.
4. Start the engine and let it idle for 3 – 5 minutes.
5. Stop the engine, wait 2 – 3 minutes and check the oil level. Make sure the oil is between the upper and lower level marks on the oil fill cap/ dipstick. If necessary, add more oil but do not overfill.
6. Check that there are no oil leaks.
7. Install the left side cover.
8. Install the seat.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly.