


Brakes

6. Push down the parking brake pin (7) and then squeeze the clutch lever/parking brake lever (8) until firm resistance is felt. Measure the distance the clutch lever/parking brake lever has moved; the distance should be:

1 – 1 3/16 in (25 – 30 mm)

7. If necessary, adjust the clutch lever/parking brake lever freeplay ([page 112](#)).

LEFT HANDLEBAR

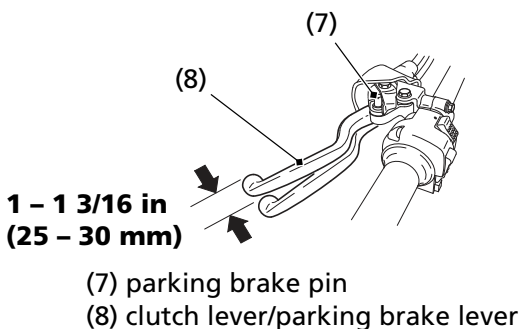

Check the clutch lever/parking brake lever and parking brake cable for loose connections or other damages. If the parking brake cable is worn or kinked, have it replaced by your dealer.

Other Inspections & Lubrication

- Check that the clutch lever/parking brake lever assembly is positioned properly and the securing bolts are tight.
- Check the parking brake cable for kinks or signs of wear. If necessary, have it replaced.
- Lubricate the parking brake cable with a commercially available cable lubricant to prevent premature wear and corrosion.