


Maintenance Component Locations

clutch lever/
parking brake lever

front brake fluid reservoir

front brake lever

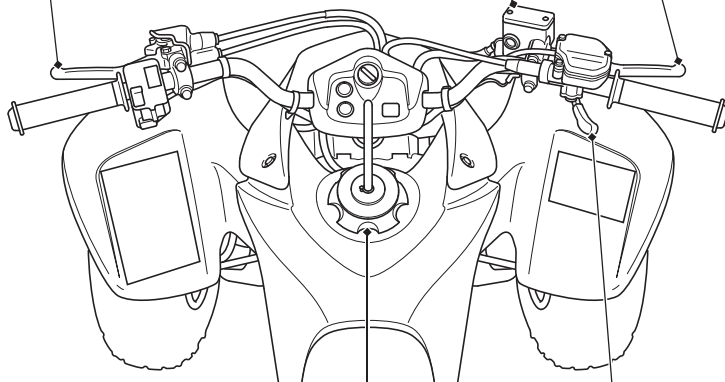

fuel fill cap

throttle lever