

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi	600	1200	
			km	1000	2000	
		NOTE	HOURS	200		
	DRIVETRAIN BOOTS			I	I	193
	FRONT/REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)	I	146, 149
*	RANGE SELECT SYSTEM				I	—
*	BRAKE FLUID	NOTE 3		I	I	176
*	BRAKE PADS WEAR	NOTE 1, 2			I	180
*	BRAKE LIGHT SWITCH		I	I	I	184
	BRAKE SYSTEM		I	I	I	176
*	REVERSE INHIBITOR SYSTEM		I	I	I	167
	GUARDS			I	I	192
*	SUSPENSION			I	I	173
*	SPARK ARRESTER			C	C	172
*	NUTS, BOLTS, FASTENERS		I		I	—
**	WHEELS/TIRES		I	I	I	185
**	TIE-ROD AND JOINT BOOTS		I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS				I	—
**	STEERING SYSTEM				I	—

- \* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 258).
- \*\* In the interest of safety, we recommend these items be serviced only by your dealer.