
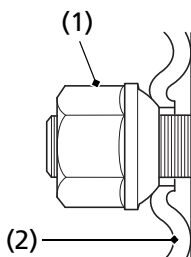


If You Have a Flat Tire

Emergency Wheel Removal/Installation

Refer to *Safety Precautions* on page 119.



TRX500FA5/FA6
(Steel wheel model):

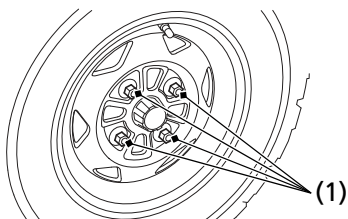

Wheel nuts:
47 lbf-ft (64 N·m, 6.5 kgf·m)

(1) wheel nuts

TRX500FA7
(Aluminum wheel model):

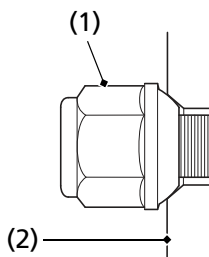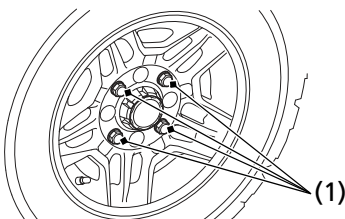

Wheel nuts:
62 lbf-ft (84 N·m, 8.6 kgf·m)

(2) wheel rim

Removal

1. Park your ATV on a firm, level surface.