


# Controls & Features


## Start/Override Button



### LEFT HANDLEBAR

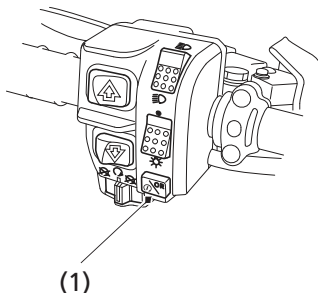

(1) start/override button

 OR START or SPEED LIMITER OVER-RIDE MODE

The start/override button (1) is used for starting the engine and activate the speed limiter over-ride mode. Pushing the button in starts the engine. See *Starting Procedure*, page 84.

When the engine is not running and the start/override button is pushed, the starter motor will crank the engine. The starter motor will not operate if the engine stop switch is in the OFF (⊗) position when the start/override button is pushed.

To activate the speed limiter over-ride mode, see *Front Differential Lock and Speed Limiter Over-Ride (Differential Lock Switch and Start/Override Button)*, page 38.