


If a Fuse Blows

EPS (Electric Power Steering) Fuse Access (TRX500FA6/FA7)

1. Turn the ignition switch to OFF (O) before checking the fuse.
2. Remove the seat (page 130).
3. Remove the rear fender cover (page 131).
4. To access the EPS fuse (1), remove the EPS fuse box cover (2).
If the EPS block fuse is blown, install the spare fuse (page 129).
5. Install the EPS fuse box cover.
6. Install the rear fender cover.
7. Install the seat.

UNDER REAR FENDER COVER

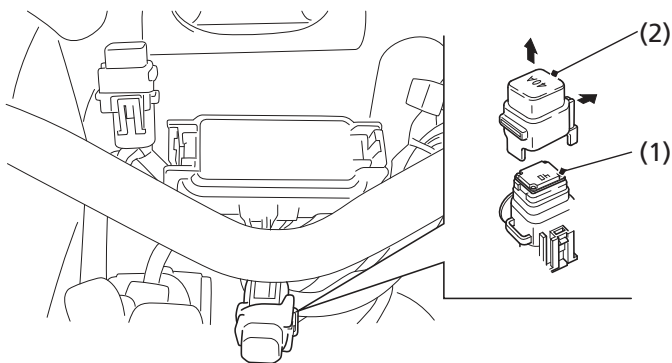

(1) EPS fuse

(2) EPS fuse box cover