

Indicators & Displays

Fuel Gauge


The fuel gauge liquid crystal display (1) shows the approximate fuel supply available. The fuel tank capacity is:

3.96 US gal (15.0 ℓ)


When segment RES (2) flashes, you should refill the tank as soon as possible. The amount of fuel remaining when the flashing starts is approximately:

0.66 US gal (2.5 ℓ)

TRX500FA

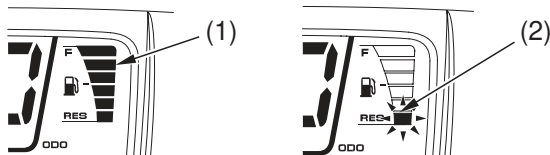

TRX500FPA

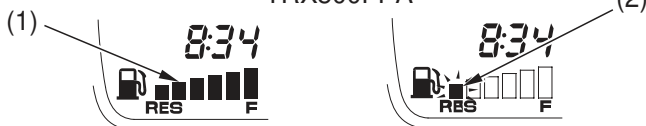


(1) fuel gauge

(2) segment RES

All segments will flash, when the fuel gauge function is fails. See your Honda dealer.

TRX500FA

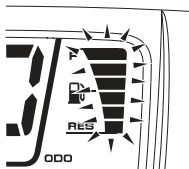

TRX500FPA

