

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 260).

For information about carburetor adjustment for riding at high altitude, see page 261 .

Safe Riding Precautions	99
Off-road Use Only	99
Keep Hands and Feet on Controls.....	100
Control Speed.....	101
Use Care on Unfamiliar or Rough Terrain.....	102
Do Not Perform Stunts.....	103
Starting & Stopping the Engine	104
Preparation	104
Starting Procedure.....	105
Flooded Engine	107
Stalled Engine	107
How to Stop the Engine	108
Using the Recoil Starter	109
Shifting Gears	110
Riding in Reverse.....	117

(cont'd)