

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇨	INITIAL		REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL	MAINT.	INTERVAL		
			mi	100	600	1200		
			km	150	1000	2000		
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
*	FUEL LINE					I	—	
*	THROTTLE OPERATION					I	177	
*	CARBURETOR CHOKE					I	179	
	AIR CLEANER	NOTE 1				C	C	171
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	176
	SPARK PLUG					I	I	181
*	VALVE CLEARANCE			I	I	I	I	184
	ENGINE OIL		INITIAL=	100 mi (150 km), 20 operating hours or 1 month: R			154	
	ENGINE OIL FILTER		REGULAR=	Every 600 mi (1,000 km), 100 operating hours or 12 months: R			159	
*	ENGINE IDLE SPEED			I	I	I	I	180
	RADIATOR COOLANT	NOTE 3			I	I	I	167
*	COOLING SYSTEM	NOTE 2			I	I	I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 270).