


# Air Cleaner

---

## Cleaning

1. Remove the seat (page150).

UNDER SEAT

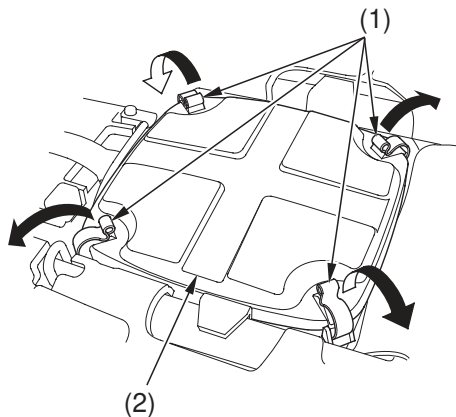

(1) retainer clips

(2) air cleaner housing cover

2. Unlatch the retainer clips (1).

3. Remove the air cleaner housing cover (2).