


Suspension

Suspension Spring Pre-Load

Refer to *Safety Precautions* on [page 105](#).

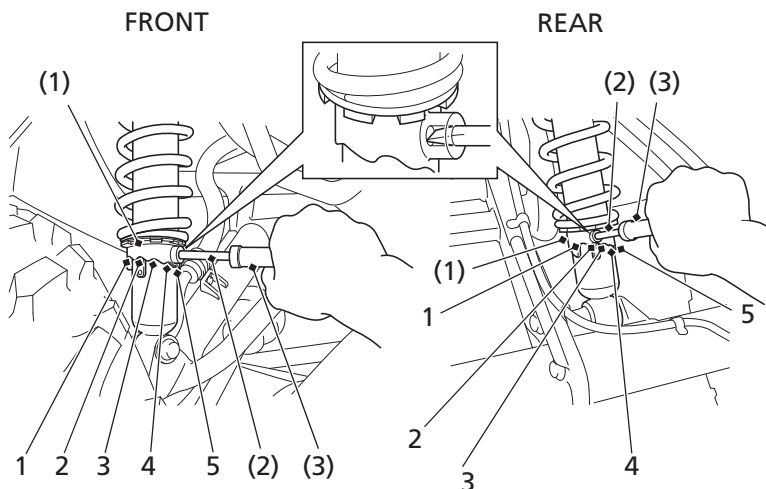

(1) spring pre-load adjuster

(3) screwdriver handle

(2) standard/Phillips screwdriver

The spring pre-load adjuster (1) has 5 positions for different load or riding conditions.

Use the standard/Phillips screwdriver (2) and screwdriver handle (3) to adjust the shock spring pre-load.