

# If Your Engine Quits or Won't Start

SYMPTOM: Engine starts, but runs poorly.	
POSSIBLE CAUSE	WHAT TO DO
idles roughly, too fast, stalls	Check engine idle adjustment ( <a href="#">page 146</a> ). If the problem persists, see your dealer.
poor engine performance at altitudes above 3,000 feet (1,000 m)	Ask your dealer to modify the carburetion with a high altitude jet. Refer to <i>High Altitude Carburetor Adjustment</i> , <a href="#">page 227</a> .
high oil/coolant temperature	Check the high oil/coolant temperature indicator. Refer to <i>If the High Oil/Coolant Temperature Indicator Lights</i> , <a href="#">page 208</a> .
runs erratically, misfires	See your dealer.
blubbers (rich fuel mixture)	See your dealer.
sooty exhaust (rich fuel mixture)	See your dealer.
detonates or pings under load	If applicable, switch to the recommended octane gasoline ( <a href="#">page 117</a> ) or change your brand of gasoline. If the problem persists, see your dealer.
afterfires (backfires)	See your dealer.
pre-ignition (runs on after ignition switched OFF)	See your dealer.